



# PROVATA™ Co-Axis™ 04.0mm and 05.0mm Tapered Implants - Drill Sequence

## Tapered (PRO12D4 / MSc-PRO12D4 Co-Axis)


### Soft Bone

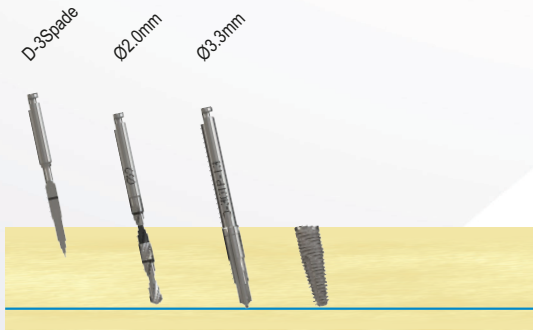

### Medium Bone

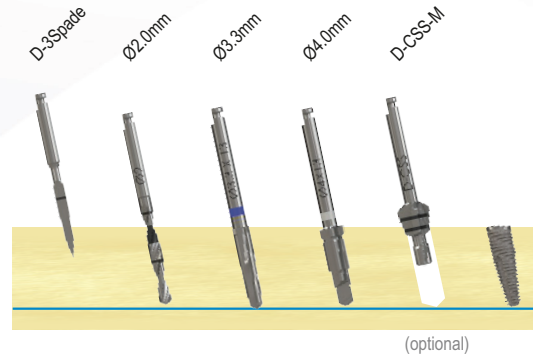


### Dense Bone

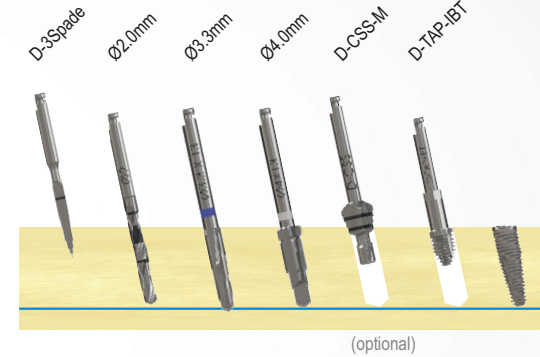


## Tapered (PRO12D5 / MSc-PRO12D5 Co-Axis)


### Soft Bone

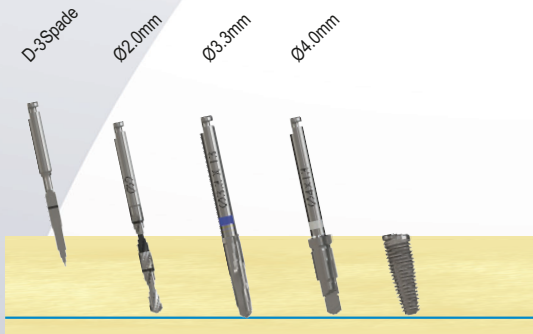

### Medium Bone

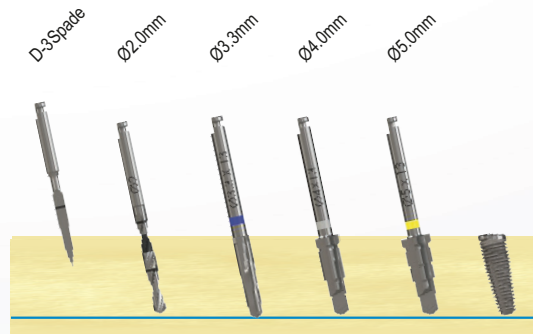

### Dense Bone

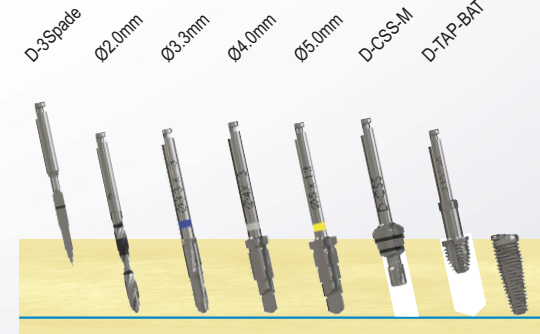

NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon. (illustration is for 13mm implants).