



## Parallel Walled (IBN)


### Soft Bone

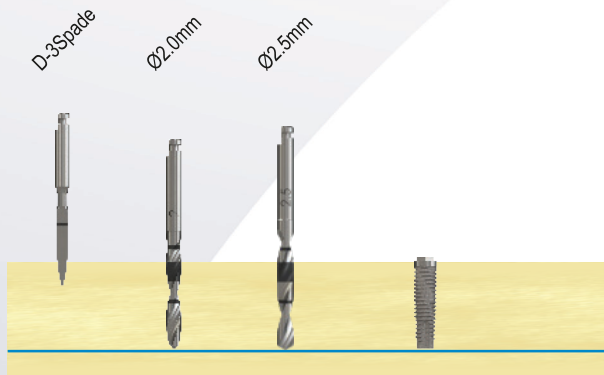

### Medium Bone

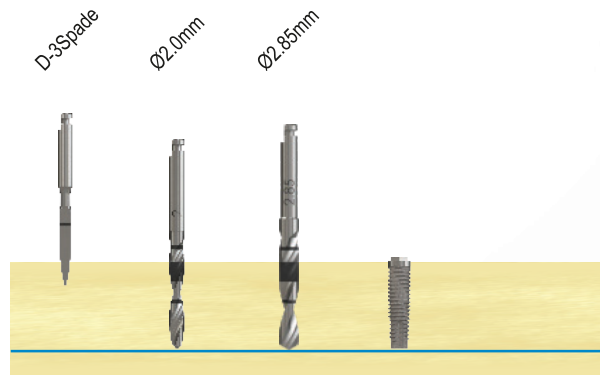


### Dense Bone

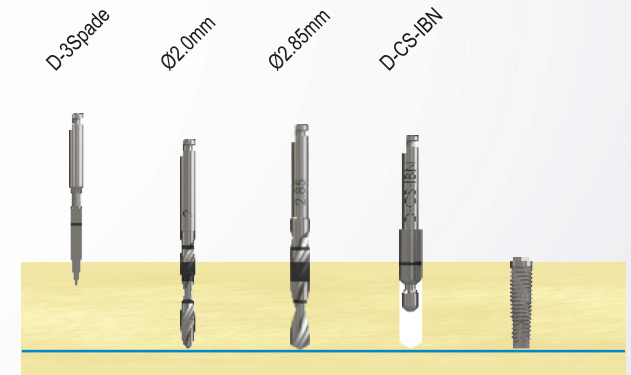


NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.  
(Illustration is for 13mm implants)

## Tapered (IBNT / MSc-IBNT)


### Soft Bone

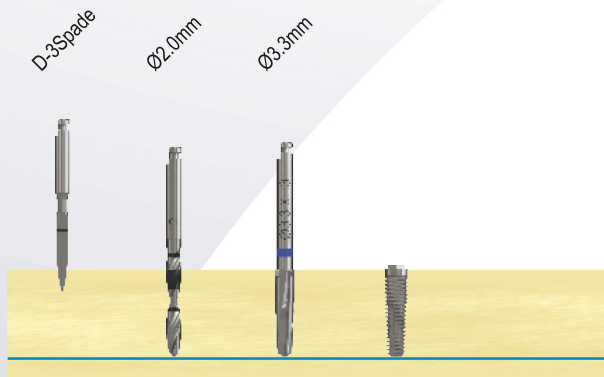

### Medium Bone

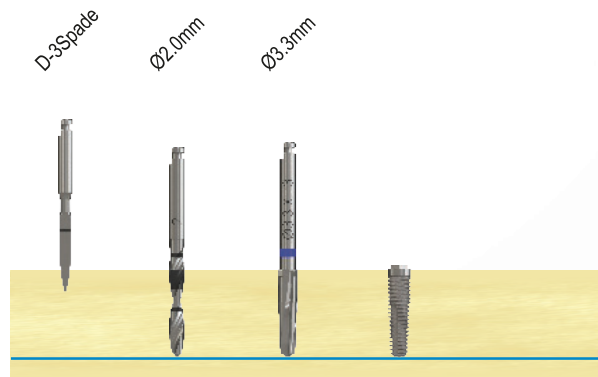

### Dense Bone

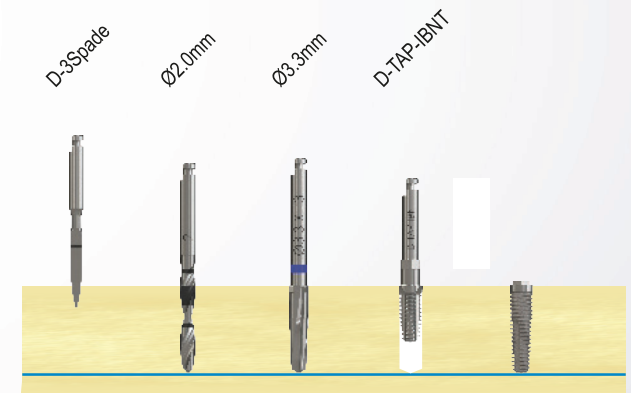

NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.  
(Illustration is for 13mm implants)