



## Tapered (BAR12d / MSc-BAR12d Co-Axis)


### Soft Bone

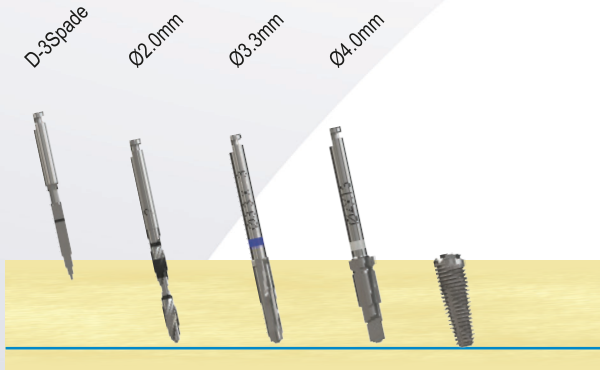

### Medium Bone

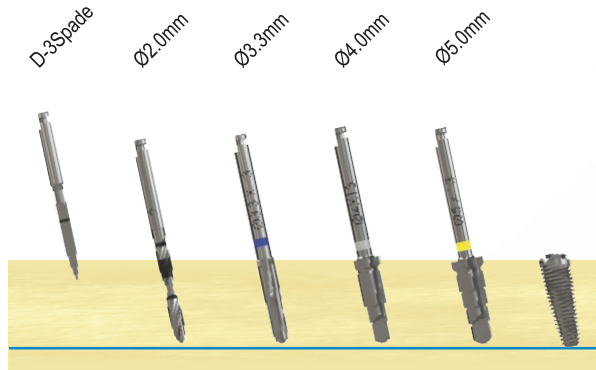


### Dense Bone

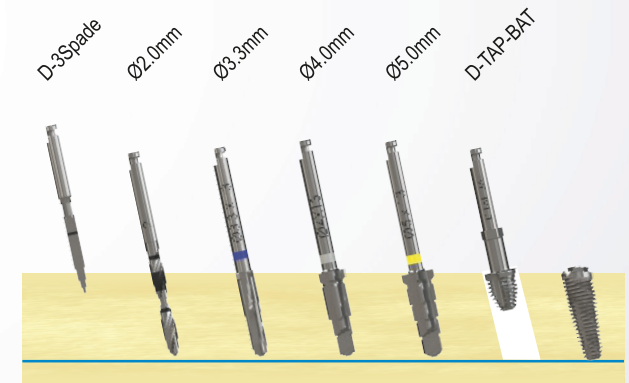


NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.  
(Illustration is for 13mm implants)

## Tapered (BAR24d / MSc-BAR24d Co-Axis)


### Soft Bone

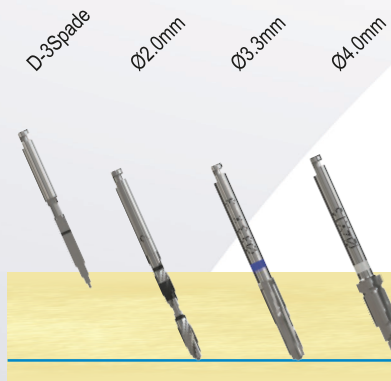

### Medium Bone

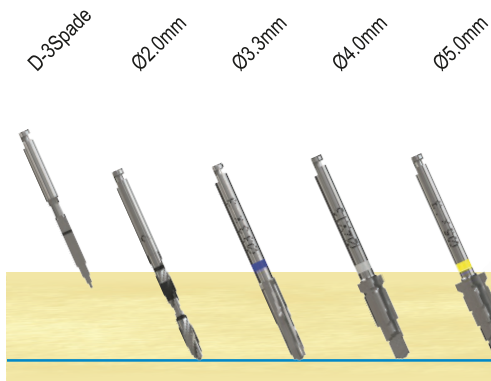

### Dense Bone

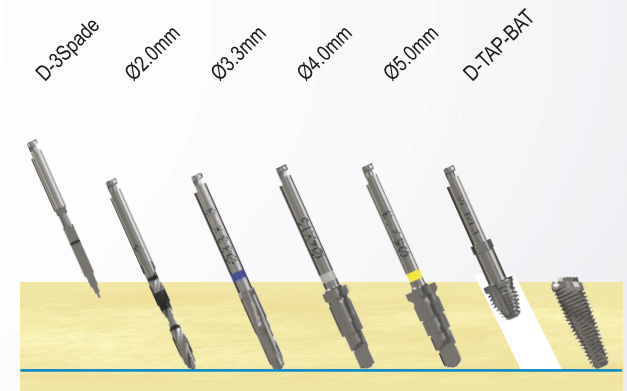


NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.  
(Illustration is for 13mm implants)

## Tapered (BAR36d / MSc-BAR36d Co-Axis)


### Soft Bone

D-3Spade  
Ø2.0mm  
Ø3.3mm  
Ø4.0mm

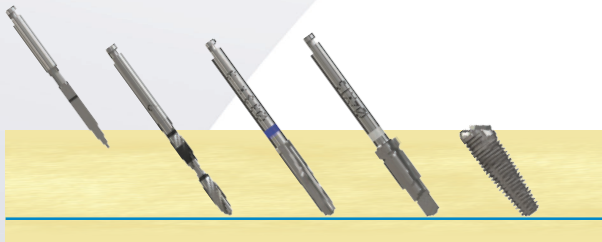


### Medium Bone

D-3Spade  
Ø2.0mm  
Ø3.3mm  
Ø4.0mm  
Ø5.0mm

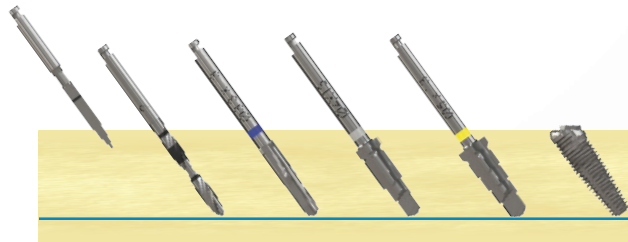

### Dense Bone

D-3Spade  
Ø2.0mm  
Ø3.3mm  
Ø4.0mm  
Ø5.0mm  
D-TAP-BAT

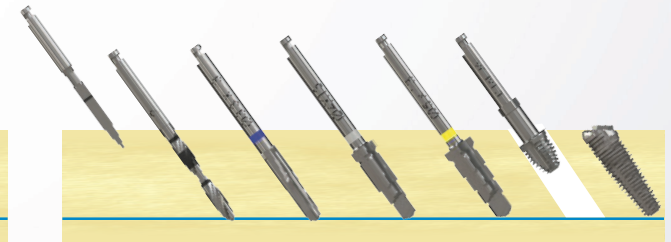

NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.  
(Illustration is for 13mm implants)