



Parallel Walled (BBBS)


Soft Bone

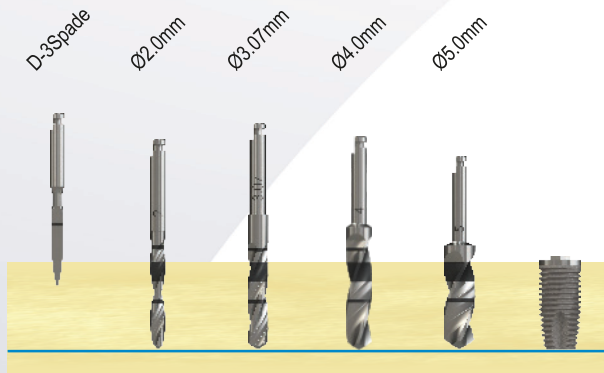

Medium Bone

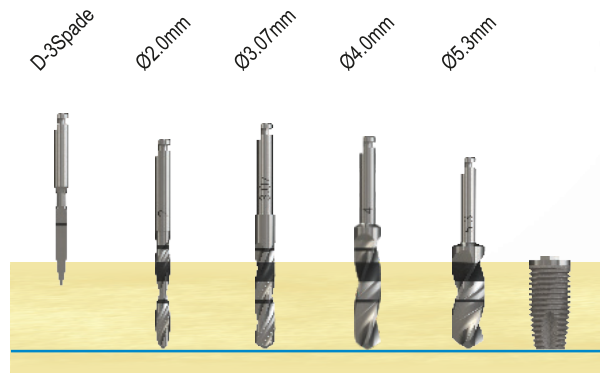


Dense Bone

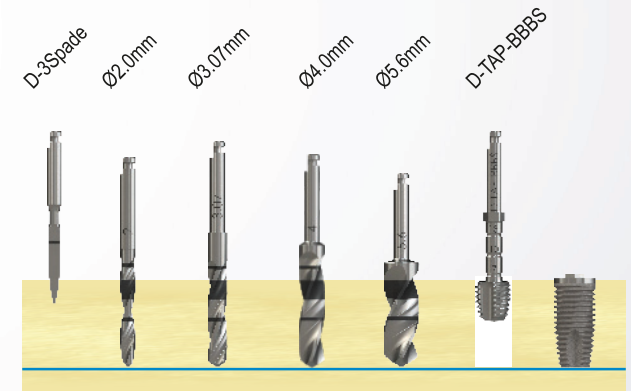


NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.
(Illustration is for 13mm implants)

Tapered (BBBT)


Soft Bone

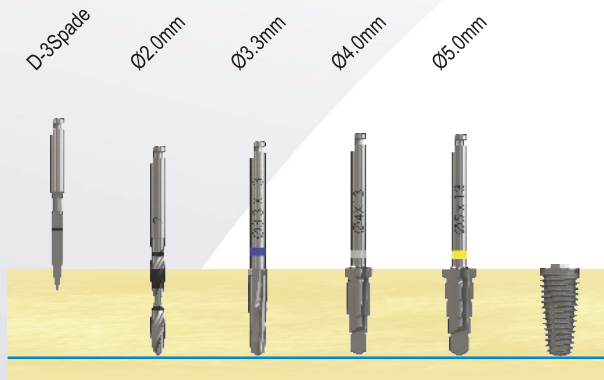

Medium Bone

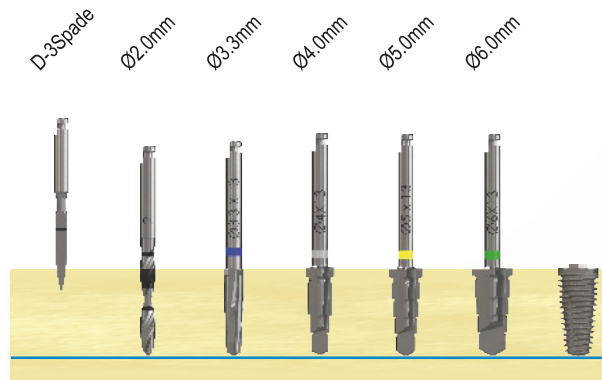

Dense Bone

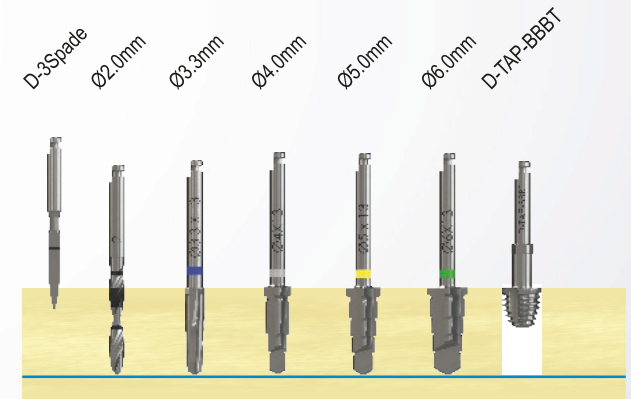

NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon.
(Illustration is for 13mm implants)