



# PROMAX 06.0mm and 07.0mm Tapered Implants - Drill Sequence

## Tapered (PROMAX6)


### Soft Bone

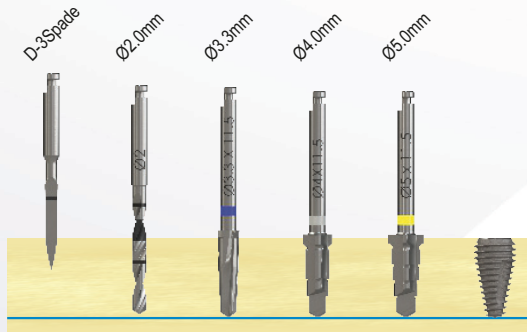


### Medium Bone

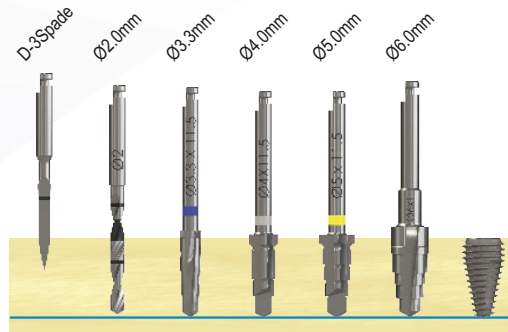

### Dense Bone

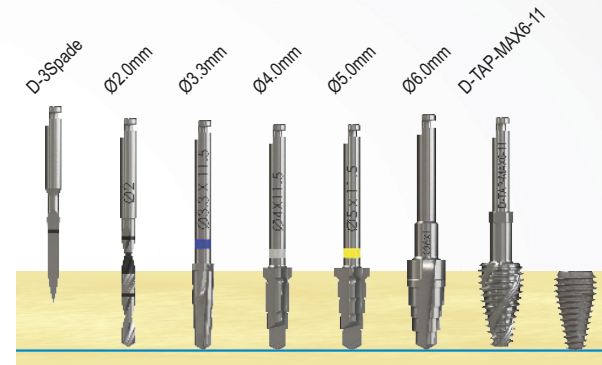

## Tapered (PROMAX7)

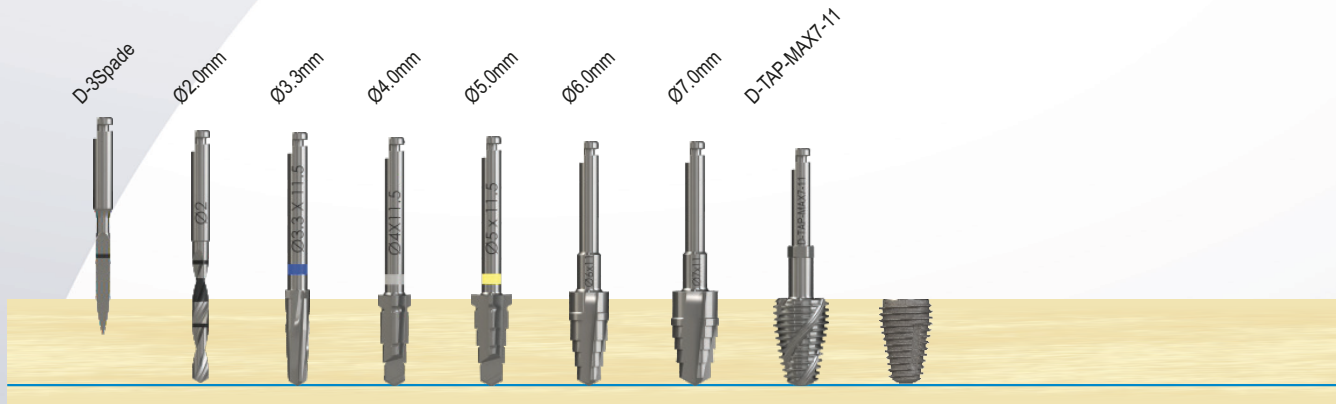

NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon. (illustration is for 11mm implants).