



PROMAX 06.0mm and 07.0mm Tapered Implants - Drill Sequence

Tapered (PROMAX8)

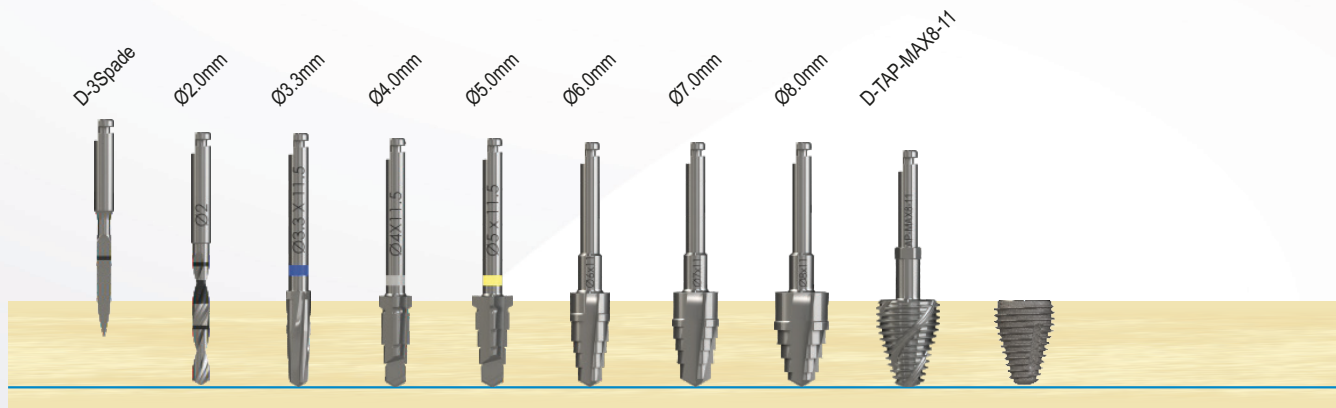

Tapered (PROMAX9)

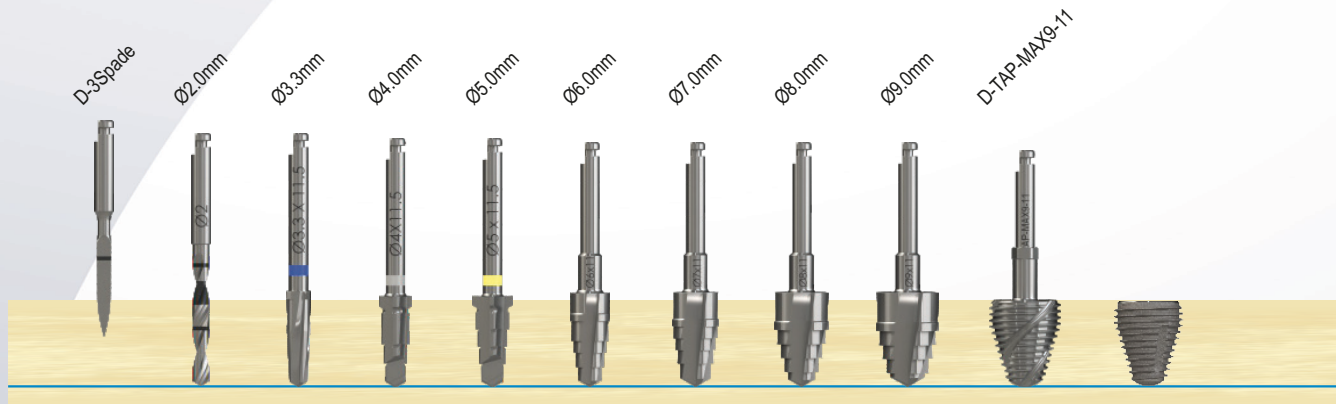

NOTE: Site preparation Sequence recommended by Southern Implants does not replace the judgement and experience of the surgeon. (illustration is for 11mm implants).